



OptoTech

# FLASH Plus

Digital Surfacing Machine




The FLASH Plus is an enhancement of our tried and tested FLASH series. Considerably increased speed of the tool spindle, combined with a high precision ball bearing, leads to significant improvements in quality and quantity. The combination of an ultrafast tool spindle and a high-performance controller make the FLASH Plus one of the most efficient manual digital surfacing-turning machines on the market.



## Données techniques

	FLASH Plus
Lens Diameter	40 mm - 85 mm
Working Range Radius cv	Milling -15 dpt / Turning -30 dpt.
Working Range Radius cx	Milling and Turning +30 dpt.
Lens Material	All organic Materials
Productivity	35 lenses/h - 120 lenses/h
Workpiece Spindles	Drive: Direct driven with high precision ball bearing concept; Interface: Collet Chuck $\varnothing 43$ mm DIN 58766
Air Pressure Requirement	6 bar
Power Requirement (others on request)	6 kW / 400 V / 50 Hz
Dimensions	Width: 1280 mm, Height: 1680 mm, Depth: 1330 mm
Weight (approx.)	1050 kg

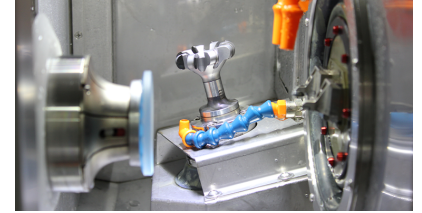

## Highlights

- The new 4-axis machine FLASH Plus was especially designed for the production of prescription lenses made of plastic
- A high dynamic drive concept combined with an ultrafast computer controller enable highest precision in freeform surfacing within shortest processing times
- For processing backsideprogressive, atoric, individual, front progressive and standard toric surfaces
- Machine base made of rigid mineral cast
- Fast-Tool highspeed linear drive
- Application area: Backside progressives; Atorical; Individual; Front progressive; Standard toric; Blended lenses

## Performance Characteristics

- Cut to smooth: approx. 120 surfaces / hour
- Cut to polish: approx. 45-65 surfaces / hour (Spherical / torical or A-torical)
- Cut to polish: approx. 35-55 surfaces / hour (Freeform)

## Options

- Vacuum clamping system
- Coolant tank
- Barcode hand scanner
- Remote diagnosis
- LAN connection