



OptoTech

# OAC-30 Veloce

Vacuum Box AR-Coating System for Ophthalmic Lenses




Compact, powerful, and future-ready - our latest coating system OAC-30 Veloce delivers outstanding performance in the smallest footprint on the market. Designed for flexibility and reliability, it helps labs of any size achieve higher productivity, more consistent coating quality, and lower operating costs.



OptoTech

Données techniques

	OAC-30 Veloce
Lens Capacity for Standard Process	Ø 70 mm: 20 Lenses (Dome) Ø 80 mm: 10 Lenses (Flip)
Lens Material	All Material
Dome	1 Sector per Batch
Dimensions	Width: 925 mm, Height: 1850 mm, Depth: 1380 mm
Weight (approx.)	780 kg

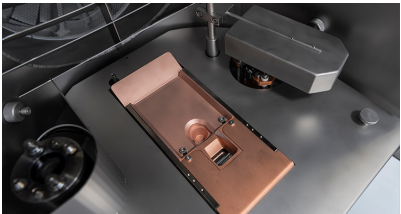



## Highlights

- Optimized chamber design for shorter pump-down and cycle times that will accelerate your coating process and improve overall lab efficiency
- Enhanced material and substrate handling thanks to integrated thermal evaporator to support hydrophobic and multi-material coatings, as well as the front-mounted adjustable heater that enables consistent heating for both plastic and mineral lenses
- Precise and stable coating process with repositioned crystal sensor and optimally positioned distribution mask ensuring accurate thickness control, uniform coatings, and high process stability
- Interchangeable dome and flip-over configurations for flexible lens diameters and production requirements
- High quality stainless steel vacuum chamber with electropolished surface
- Compatible with hard coats made by spin-coating or dip coating
- Pumping system with turbo pump and pre-pump
- Electron-beam evaporation system
- Ion source ideal for all lab sizes machines
- Thin film deposition control with quartz crystal method
- Intelligent vacuum pressure control for reliable, repeatable results
- Process control unit with user interface
- Industry 4.0/5.0 integration with digital monitoring and data tracking
- The redesigned layout ensures that all key components are easy to reach, making maintenance and servicing faster and more efficient

## System Advantages

- **Smaller footprint, bigger performance** - lightest and most compact platform on the market, easy to install in any lab
- **Ideal entry system for AR coating** - perfect for small Rx labs and labs starting with in-house AR production
- **Reliable for daily use** - built for consistent performance and stable results in continuous operation
- **Fast and flexible** - Easy-to-operate, highly flexible and with very short cycle times. Adaptable configurations keep your lab efficient and responsive
- **Future-ready** - full Industry 4.0/5.0 integration for smart process monitoring and data tracking
- **Service-friendly** - redesigned layout gives quick access to all key components for reduced downtime

## Performance Characteristics

*DURACOTE* - AR coating on plastic lenses

*DURAFLEX* - Mirror coating in different vibrant colours

*DURAQUARTZ* - AR coating on mineral lenses

*IRIDIO* - Anti-static coating

*IR PROTECT* - IR protection with NIR blocker

*RELAX* - Blue light protection filter

*UV* - UV light protection filter

## Options

- Meissner-trap with Polycold cooling system for shorter process cycles
- Gate valve for turbo pump
- Dual position thermal evaporator: Handle two thermal sources for even broader process possibilities
- Dome sectors or Flip-Over insert
- Wide range of coating consumables and coating materials available